Gigaset

SL910-SL910A

Congratulations

By purchasing a Gigaset, you have chosen a brand that is fully committed to sustainability. This product's packaging is eco-friendly!

To learn more, visit www.gigaset.com.

GIGASET. INSPIRING CONVERSATION.
MADE IN GERMANY

Gigaset SL910/SL910A – with the special "touch"

Congratulations on your purchase of the first Gigaset with touchscreen. This phone sets new standards with its high-quality **genuine metal** frame, **3.2" TFT colour touchscreen** and excellent sound quality and, last but by no means least, its impressive interior qualities. Your Gigaset can do a lot more than just make calls:

Set up one of the three home screens according to your needs

Bring together the important functions and numbers, which you can start up or call directly from idle status with a single "touch".

Customise

Give each caller his own personal portrait, look at your personal pictures as a screensaver slide show and load the ringtones you want onto your handset.

Make sure your phone is always up-to-date

Use the base's Ethernet connection to download new and expanded versions of the base firmware directly from the Internet.
You can load new handset software from your PC to the handset using our **Gigaset QuickSync** software.

Other practical information

Copy directories from existing Gigaset handsets, use the QuickDial function, adapt your Gigaset to your handsfree needs. Use the silent alert, the time control for calls and much more...

For more information about your phone, visit www.gigaset.com/gigasetsl910

After purchasing your Gigaset phone, please register it at www.gigaset.com/service – this will ensure any questions you may have or warranty services you request are dealt with even faster!

Have fun using your new phone!

Contents

Gigaset SL910/SL910A – with the special "touch" 1

Overview of handset 3

The base at a glance 4

Display icons 4

Safety precautions 7

First steps 8
Checking the package contents 8
Installing the base and charger 8
Connecting the base with the phone network and the mains power supply 9
Connecting the handset charger 10
Setting up the handset for use 11
Setting up the base and handset – installation wizard 13
Handset in idle status 17

Using the phone 18
Activating/deactivating the handset 18
Operating the touchscreen 18
Handset idle display 19
Using the menus 21
Scrolling through lists (vertical scrolling) 23
Options 24
Entering numbers and text, incorrect entries 25
Returning to idle status 26
Returning to the previous display page 26
Activating/deactivating key and display lock 26

Menu tree 27
Applications menu 27
Settings menu 28

Making calls 32
Making an external call 32
Accepting a call 32
Handsfree mode 32
Switching to mute 32
Security check 33

Customer Service & Assistance 33

Manufacturer warranty (Middle East) 35

Service Centres (Midde East) 37
Authorisation 39

Index 40

Overview of handset

Message LED

Proximity sensor (➔ page 26)

Touchscreen/display (➔ page 18)
Sample display: "dial page" for entering phone numbers in idle mode (one of three idle display pages; ➔ page 19).

Status bar (➔ page 20)
The internal handset name (e.g., **INT 1**) and icons (➔ page 4) that display the current settings and the operating status of the phone
Touch the status bar to display the status page.

Navigation area (➔ page 19)
Page position marker, change page.

Keypad
Numerical keypad to enter phone numbers

Option slider (➔ page 24)
Displays the possible actions

Handset keys:

Talk key
Dial displayed number, accept call
During a call/during playback of messages from answering machine/when establishing a connection: switch between earpiece and handsfree mode
In idle status: open redial list (press **briefly**)

End call/end key
Press **briefly**: end (active) call/paging call, reject internal call
Switch off ringtone for external call
Otherwise: return to idle status
Press and **hold**: activate/deactivate handset

Menu key
Press **briefly**: open main menus (➔ page 21)
Press and **hold**: activate/deactivate key and display lock (➔ page 26)

Underside of the handset:

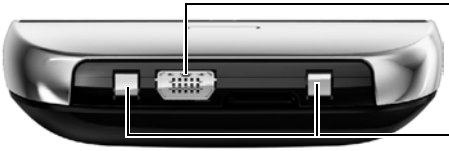

Mini USB connection socket
Connect wire-bound headset or handset to your PC (**Gigaset QuickSync**)

Charging contacts

The base at a glance

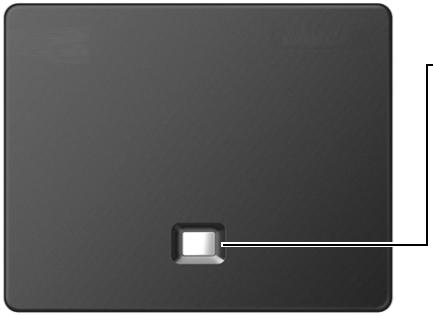

Paging key

Press **briefly**:
Start paging
Press and **hold** (approx. 3 seconds):
Set base to registration mode
Flashes:
Base in registration mode
Lights up:
LAN connection active (for firmware update only)

Display icons

Icons on the status bar

The following icons are displayed in the status bar depending on the settings and the operating status of your telephone:

Icon	Meaning
	Signal strength (Eco Mode+ off)
	76%–100% (White if Eco Mode is off / Green if Eco Mode is on)
	51%–75% (White if Eco Mode is off / Green if Eco Mode is on)
	26%–50% (White if Eco Mode is off / Green if Eco Mode is on)
	1%–25% (White if Eco Mode is off / Green if Eco Mode is on)
	Red: no connection to the base
	Eco Mode+ activated: White if Eco Mode is off Green if Eco Mode is on
	Answering machine activated (SL910A only)
	Bluetooth activated **or** Bluetooth headset/data device connected
	Ringtone deactivated
06:00	Alarm switched on and wake-up time set

Icon	Meaning
	Battery charge status:
	White: charged over 66%
	White: charged between 34% and 66%
	White: charged between 11% and 33%
	Red: charged below 11%
	Flashing red: battery almost empty (less than 10 minutes talktime)
	Battery charging (current charge status):
	0%–10%
	11%–33%
	34%–66%
	67%–100%

Option slider icons

The functions on the option slider change depending on the operating situation.

Icon	Action
	Activate handsfree mode
(orange)	(Handsfree mode is activated) Deactivate handsfree mode
	Handsfree profile
	Deactivate handset microphone
(orange)	Reactivate handset microphone
	Deactivate ringtone
(orange)	(The ringtone is deactivated) Reactivate ringtone
	Set volume
	Open call lists
	Open directory
	Copy number to directory
	Create SMS
	Send SMS
	Reply to SMS
	Open drafts list
	De-register handset
	Open list of internal callers/make internal call
	Create new directory entry
	Initiate consultation call
(orange)	End consultation call
	Initiate three-way conference call
(orange)	End conference call
	QuickDial
	Copy list
	Add name, number etc. to an entry
	Copy entry
	Edit entry
	Show keypad

Icon	Action
	Determine free memory in the resource directory
	Search
	Skip settings
	Delete
	Save/select
	Enter new appointment
	Calendar: Set selected date to **Today**
	Change order (sort by last name or first name)
	Directory entry: Delete caller ringtone assignment
	Directory entry: Delete caller picture assignment
	Delete anniversary
	Trust Bluetooth device found
	Divert call to answering machine
	Play messages
(red)	Record announcement
	Stop recording
	For message playback: Go back five seconds

Please note

The menu icons can be found in the menu overview on page 27.

Signalling icons

Establishing a connection (outgoing call)

Connection established

Connection cannot be established or connection interrupted

Internal/external call

Alarm call

Reminder call for anniversary

Reminder call for appointment

Answering machine is recording

Other display icons:

Information

(Security) prompt

Please wait...

Action complete (green)

Action failed (red)

Warning

Please note

This quick user guide only describes a small proportion of your base's functions. A detailed description of all functions in the menu tree can be found in the long user guide for your Gigaset SL910/SL910A on the enclosed CD.

Safety precautions

Warning

Read the safety precautions and the user manual before use.
Explain their content and the potential hazards associated with using the telephone to your children.

Use only the power adapter supplied, as indicated on the rear of the base.

Use only the **supplied, original batteries** as this could otherwise result in significant health risks and personal injury. Replacement batteries can be obtained via the Gigaset Service Hotline.

Using your telephone may affect nearby medical equipment. Be aware of the technical conditions in your particular environment, e.g., doctor's surgery.
If you use a medical device (e.g., a pacemaker), please contact the device manufacturer. They will be able to advise you regarding the susceptibility of the device to external sources of high frequency energy. Please refer to the "Appendix" chapter for the specifications of this Gigaset product.

Do not hold the rear of the handset to your ear when it is ringing or when handsfree mode is activated. Otherwise you risk serious and permanent damage to your hearing.
Your Gigaset is compatible with the majority of digital hearing aids on the market. However, perfect function with all hearing aids cannot be guaranteed.
The handset may cause interference in analogue hearing aids (humming or whistling) or cause them to overload. If you require assistance, please contact the hearing aid supplier.

Do not install the base or charger in bathrooms or shower rooms. The base and charger are not splashproof.

Do not use your phone in environments with a potential explosion hazard (e.g., paint shops).

If you give your phone to a third party, make sure you also give them the user guide.

Remove faulty bases from use or have them repaired by our Service team, as these could interfere with other wireless services.

Please note

- Not all functions described in this user guide are available in all countries and with all network providers.
- The device cannot be used in the event of a power failure. In this case, it is also not possible to transmit **emergency calls**.

First steps

Checking the package contents

- One Gigaset SL910/SL910A **base**
- One power adapter for the base
- One phone cable (flattened)
- One Gigaset SL910H **handset**
- One battery cover (rear cover for the handset)
- One battery
- One **charger**
- One power adapter for the charger
- One user guide.

Installing the base and charger

The base and charger are designed for use in dry rooms in a temperature range of +5°C to +45°C.

▶ Set up the base on a level, non-slip surface at a central point in the building or mount the base on the wall.

Please note

Pay attention to the range of the base.
This is up to 300 m in unobstructed outdoor areas and up to 50 m inside buildings. The range is reduced when Eco Mode is activated.

The phone's feet do not usually leave any marks on surfaces. However, due to the multitude of different varnishes and polishes used on today's furnishings, the occurrence of marks on the surfaces cannot be completely ruled out.

Please note:

- Never expose the telephone to the effects of heat sources, direct sunlight or other electrical devices.
- Protect your Gigaset from moisture, dust, corrosive liquids and fumes.

Connecting the base with the phone network and the mains power supply

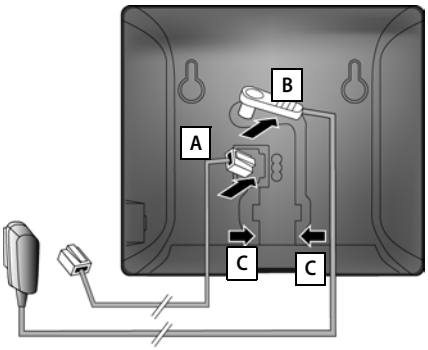

- Insert the phone cable (cable slightly flattened) into the lower connection socket A at the rear of the base.
- Insert the power cable for the power adapter into the upper connection socket B at the rear of the base.
- Insert both cables into the appropriate cable channels C.

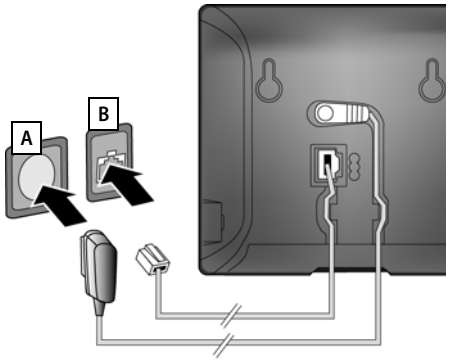

- **First**, connect the power adapter A.
- **Then** connect the phone jack B.

Please note:

- The power adapter must **always be connected**, as the phone will not operate without a power supply.
- Use only the power adapter and phone cord **supplied**. Pin connections on telephone cables can vary.

Connecting the handset charger

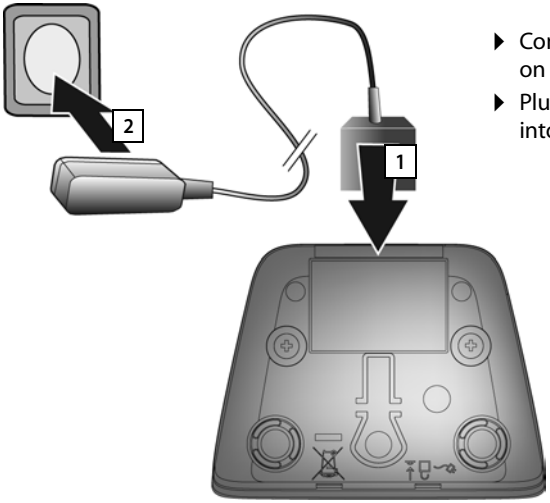

- Connect the flat plug on the power adapter 1 .
- Plug the power adapter into the plug socket 2 .

If you have to remove the plug from the charger again:

- Disconnect the power adapter from the mains power supply.
- Press the release button 3 and disconnect the plug 4 .

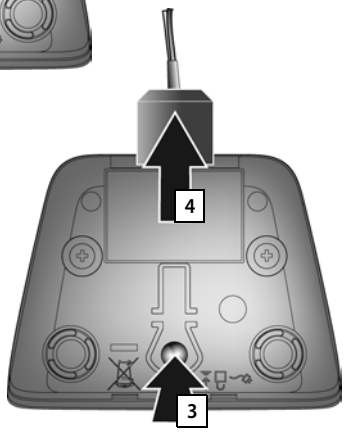

Setting up the handset for use

The handset's display and keys are covered with a protective film. **Please remove the protective film!**

Warning

Please do **not** use any touchscreen styli to operate the handset!

Do not use any protective sleeves/films from other manufacturers, as they may restrict the operation of your handset.

Inserting the battery and closing the battery cover

Warning

Use only rechargeable batteries recommended by Gigaset Communications GmbH, as this could result in significant health risks and personal injury. For example, the outer casing of the battery could be destroyed or the battery could explode. The phone could also malfunction or be damaged as a result of using batteries that are not of the recommended type.

- First insert battery with the contact surface facing down 1.
- Then press the battery downwards 2 until it clicks into place.

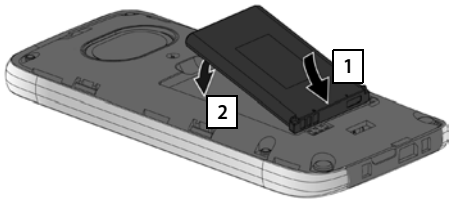

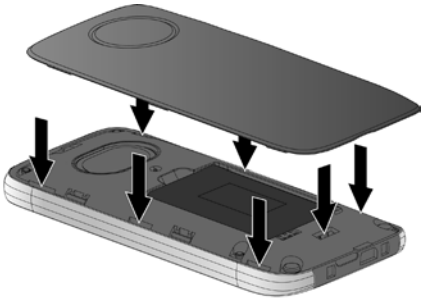

- First, align the protrusions on the side of the battery cover with the notches on the inside of the casing.
- Then press the cover until it clicks into place.

To **reopen the battery cover** to replace the battery:

- Insert your fingernail into the cavity on the bottom of the battery cover and pull the battery cover upwards.

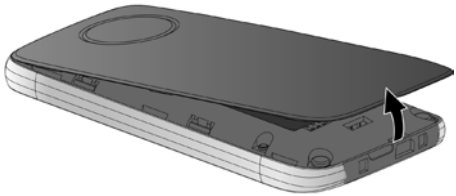

- To **remove the battery**, insert your fingernail into the cavity on the casing and pull the battery upwards.

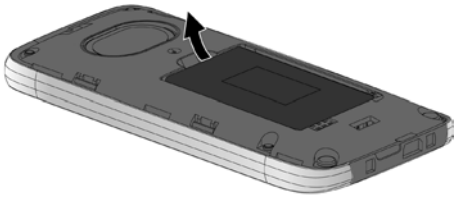

Charging the battery

The battery is supplied with a partial charge. Please charge it completely before use.

- Charge the handset in the charger for **5 hours**.

Please note

The handset must only be placed in the designated charger.

- Place your handset back in the charger after every call.

Please note

- Handsets contained in the package have already been registered to the base. If, however, a handset has not been registered (display "**Handset not registered to any base**"), please register it manually.
- The battery is also charged if the handset is connected via a USB connection to a PC with a power supply of 500 mA.
- The battery may heat up during charging. This is not dangerous.
- After a time, the charge capacity of the battery will decrease for technical reasons.

Setting up the base and handset – installation wizard

Once the handset has been charged sufficiently, the installation wizard starts automatically. It helps you to configure the following key settings on the handset and base, which are required for operation:

- Time and date
- Display language
- Country in which the phone will be used
- Your own area code

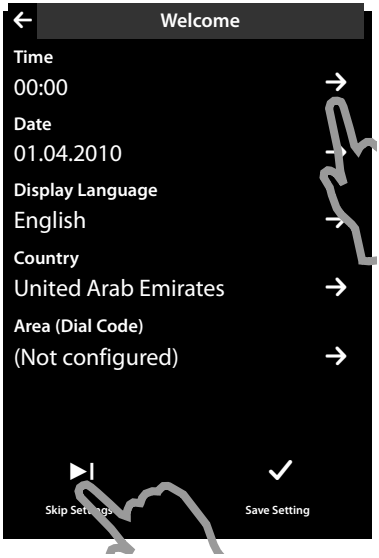

If you do not want to configure the settings at this point:

- Touch the [**Skip Settings**] option at the bottom of the display.

The handset then switches to idle status.

You can configure the settings at a later stage using the **Settings** menu on your handset.

To configure the settings:

- Touch the icon next to the time to set the time.

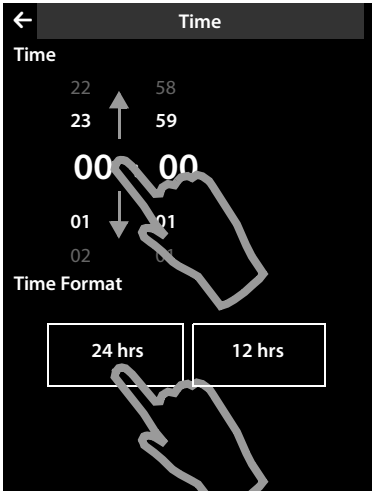

- Use the left-hand number wheel to select the current hour by touching the number wheel with a finger and moving it upwards or downwards. The number wheel will follow your movements.
- Operate the right-hand number wheel in the same way to select the minutes.
- Specify whether you wish the time to be displayed in **12 hrs** or **24 hrs** mode. To do this, touch the corresponding area under **Time Format**.

  The current setting is highlighted.
- Touch the icon (at the top left of the display) to return to the **Welcome** page.

Comment: If you set the **12 hrs** mode, **am**/**pm** is shown next to the number wheels.

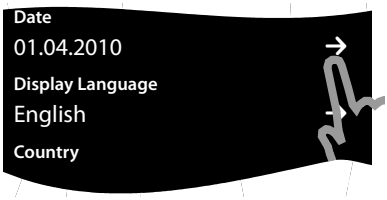

- Touch the → icon next to **Date** to set the date.

- Use the three number wheels to set the current date. The procedure is the same as for setting the time.

The current mode for displaying the date is displayed under **Date Order** (here: **Day Month Year**). If you want to change the mode:

- Touch the → icon.

- Touch the required mode **Day Month Year** / **Month Day Year**.

The selected mode is marked with ◉.

- Touch the ← icon to return to the **Date** page.
- Touch the ← icon again to return to the **Welcome** page.

The current language is displayed under **Display Language**.

If you want to change the setting:

- Touch the → icon next to the language displayed.

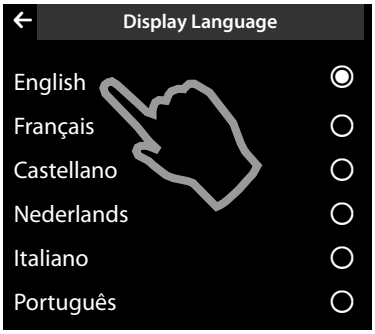

This brings up a list containing all the available languages.

The current language is marked with ◉.

- Touch the required language.

If your language is not displayed, the list may be "longer" than the display. You must then scroll through the list.

- To do this, put a finger on the display and move it slowly upwards.

The lower section of the list is then displayed and you can select a language.

After selecting the language, the following security prompt is displayed:

- Touch the ☑ icon and the ← icon on the following display screen (top left of the display).

You return to the **Welcome** page.

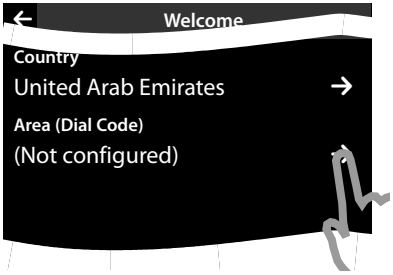

Enter the country under **Country** in which you will operate the phone and for which it is authorised. If the setting is not compatible:

- Touch the corresponding → icon.

A list of countries is displayed.

The current country is marked with ◉.

- Touch your country. You may have to scroll through the list as described previously. The ◉ icon moves to this country.
- Touch the ← icon again to return to the **Welcome** page.

Please note

If you have selected **Other Country** instead of a country, the **Welcome** page will also show the **Country (Dial Code)** entry.

- Touch the corresponding → icon and enter the **International Prefix** and **International Area Code** for the international country code, as described below for the area code.

Proceed as described below.

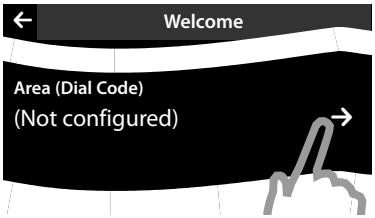

Finally, you have to enter your area code:

- Touch the corresponding → icon.

The **Local Prefix** refers to the country-specific prefix that is put in front of the area code when you do not dial the country code.

The **Local Prefix** is only displayed if it is not already stored in the phone for the selected country.

- Use the keypad to enter the **Local Prefix** if required (maximum 4 characters) and the **Local Area Code** (maximum 8 characters).
  Before entering the numbers, briefly touch the field where the numbers should be entered.
  You can correct incorrect entries using ⌫.
- Touch ✓ after entering the numbers to complete the entry.

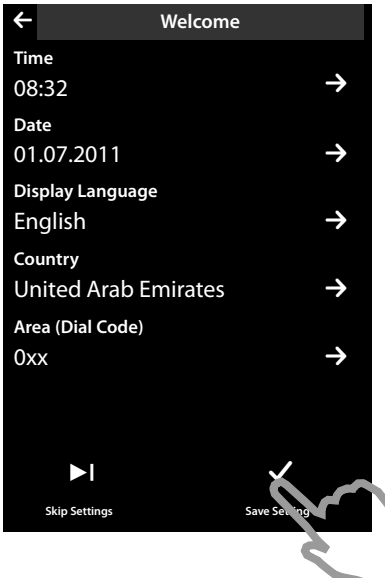

The **Welcome** page is displayed again.

- Touch the [**Save Setting**] option to save your settings.

The handset switches to idle status.

Handset in idle status

Once you have configured all the necessary settings, your handset switches to idle status. There are three idle display pages (➔ page 19). When you first set up the phone, the **configurable page** that you can customise is displayed. Here, you can compile important functions and phone numbers for quick access. Some are set by default.

Status bar
Contains the internal handset name (e.g., **INT 1**) and icons that display the current settings and the operating status of the phone. To discover the meaning of the icons, see page 4.
Touch the status bar to display the status page (➔ page 20)

Current date

Time

Open directory

Open call lists

Your phone is now ready for use.

Using the phone

Activating/deactivating the handset

- Press and **hold** the end call key in idle status to deactivate the handset. You will hear a confirmation tone.
- Press and **hold** the end call key again to reactivate the handset.

Operating the touchscreen

The Gigaset SL910H handset is primarily operated using the display and only to a small extent using the three buttons on the handset.

Icons, list entries, buttons and sliders shown on the display are sensitive areas. You can set up and activate functions, enter or dial phone numbers and navigate between the various display screens (pages) by touching these areas and dragging them across the display.

Selecting functions/list entries

To activate a function or select a list item (directory, submenu, call list), simply tap your finger on the corresponding icon or on the required list entry on the display.

Activating/deactivating functions

Functions, e.g., room monitor, call divert, answering machine, are activated and deactivated via buttons.

If the button slider is to the right, the function is activated. The area to the left of the slider is highlighted (**on**).

If the button slider is to the left, the function is deactivated (**off**). The area to the right of the slider is black.

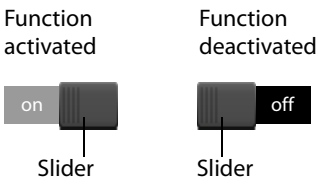

There are two ways to operate a button:

- Slowly drag the slider to the right or left to activate or deactivate the function.
- Touch the area to the right or left of the slider **briefly** and the slider moves to the right or left to the area that has been touched.

Handset idle display

The idle display consists of three pages that are shown separately on the display.

- The **configurable page** (example ➜ page 17)

  You can customise this page yourself.

  By default, the date and time are displayed and quick access can be set for call lists and the directory (➜ page 17).
- The **dial page** (example ➜ page 3)

  You will need this page to make calls. The dial page contains an optional field (numerical keypad) to enter phone numbers. You can use the options on this page to make internal calls and to dial numbers from the directory and the call lists.
- The **message page**

  You can use this page to go straight to the message lists for the phone: call lists, answering machine list, SMS inbox and network mailbox. An icon and the number of new and old messages are displayed for each list that contains entries. Touch the icon to open the corresponding list.

The default configuration, i.e., after the handset is switched on for the first time, is to display the configurable page.

Navigation area, changing the page

You have to scroll right or left to move from one page to the next.

Each idle display page therefore has a navigation area (example):

The page position marker shows which idle display page is currently being displayed. The example shows the middle page.

- To scroll to the right, touch the icon in the navigation area or place a finger on the display and drag it to the left.
- To scroll to the left, touch the icon or place a finger on the display and drag it to the right.

The scroll function is continuous. On the third page (far right;), touch again to display the first page (far left;).

Status bar and status page

On each of the three pages, a status bar appears in the header.

For the corresponding icons and their meaning, see page 4.

Touch the status bar to display the **status page**. This page gives you direct (quick) access to the settings for Eco Mode, Eco Mode+, the answering machine for the SL910A, the Bluetooth interface, the ringtone settings and the alarm clock.

Status page:

- You can use the button on the right to activate or deactivate the relevant components directly. To do this, drag the slider on the touchscreen to the right (**on**) or the left (**off**).
- Touching the list entry e.g., **Alarm**, opens the corresponding pop-up menu that you can use to configure all the settings for the component.
- Touching **Show Service Info** displays the service information for your handset. You may need the service information when you contact our hotline.

Closing the status page

▸ Touch the icon in the header to return to the idle display.

Using the menus

All the functions for the base and the handset are provided in a menu (main menu).

Open the menu:

▶ Briefly press the middle key O when the handset is in idle status.

The main menu is divided into two "pages" that are displayed separately. The **Applications** page (subsequently referred to as the **Applications** menu) comprises all the applications offered by your base or handset. The **Settings** page (subsequently referred to as the **Settings** menu) offers all the setting options for the base, handset and telephony.

The following picture shows examples of the menus. The functions/applications contained in the menus depend on the firmware version that is loaded.

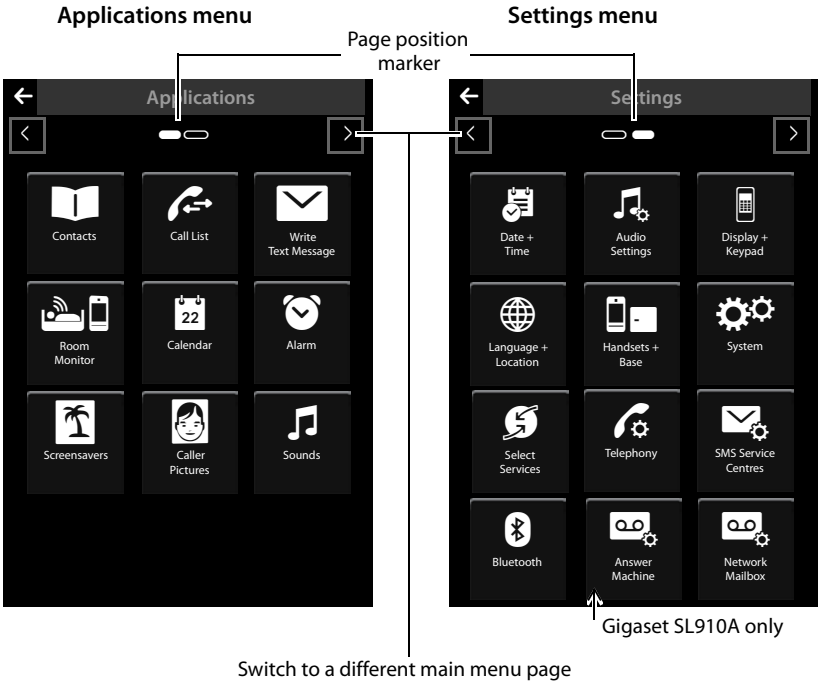

Changing between the menu pages

You can switch between the menu pages in the same way as you switch between the pages in idle mode, using ❮, ❯ or dragging horizontally over the display (➔ page 19).

Applications that are currently unavailable and settings that cannot currently be accessed (e.g., because the handset is out of range of the base) are greyed out.

Opening the submenu

Touch an icon on one of the main menu pages and it will be highlighted. The corresponding submenu or a new display page is opened up with settings options for the application.

The submenus are displayed as lists. The lists contain the parameters that can be configured and the current setting, available options or buttons to activate/deactivate.

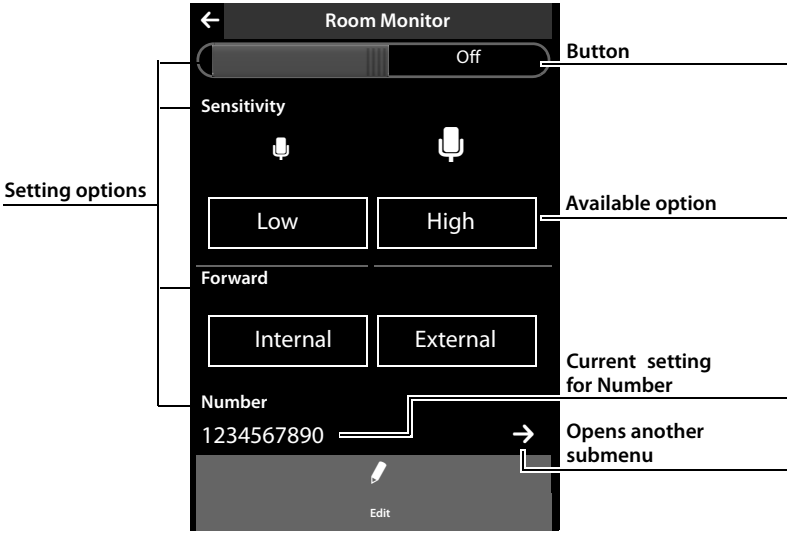

Configuring service functions

It is not possible to access functions that are only required in special cases directly from the menu. These functions include settings for special pauses that may have to be changed when the telephone is connected to a PABX.

To activate these functions, you have to enter a PIN code in the **Settings** menu.

- Open the **Settings** menu (➔ page 21).
- Mentally assign the numbers 1 to 9 to the first 9 icons in the **Settings** menu in rows (see illustration below).

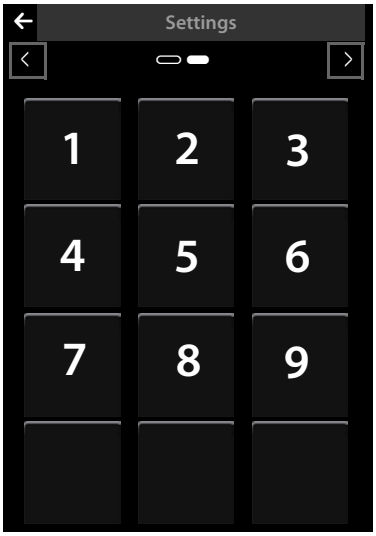

i.e.:

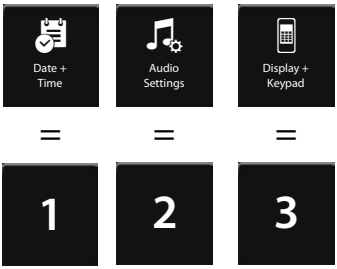

etc.

The numbers are **not** shown in the display! They were positioned here above the menu icons for better understanding.

- If you want to activate a **service function**, press and **hold** (for approximately 2 seconds) the following icons relating to the numbers:
  1 4 7 2 3 6 5 9 8.
- A number field opens, which you can use to enter a function-specific code.

Scrolling through lists (vertical scrolling)

If lists (not submenus) are longer than the display, i.e., if it is not possible for all the list entries to be displayed at once, then a drop shadow on the lower and/or upper edge of the display indicates the direction you have to scroll in to view more of the list.

You have to scroll vertically through lists:

- Drag from bottom to top over the display to scroll down in the list (i.e., it appears as if you are pushing the section currently visible upwards out of the display so that the bottom section appears in the display).
- Drag from top to bottom over the display to scroll upwards in the list.

As soon as you scroll in a list, a scroll bar is displayed on the right side of the display. This shows the size and position of the visible section of the list.
Scrolling through lists is not continuous, i.e., you have to scroll back to return to the top from the end of the list.

Options

Many display pages (especially lists like directories, call lists) have an **option slider** in the lower section. This displays all the actions that you can apply in the current context.

- Touch an option to perform the corresponding action.

Example (moveable option slider):



If all of the options cannot be displayed at the same time in one row, a moveable option slider is generally used. You can scroll horizontally using the option slider.

Moving the option slider (horizontal scrolling)

A moveable option slider is identified by an arrow to the right and/or left next to the options (see the picture above). The arrows indicate that there are additional options to those that are visible.

- Place a finger on the option slider and drag to the left to view the options to the right.
- Pull the finger to the right to view the options to the left.

Showing/hiding option slider

While establishing an external connection and during an external call, an option slider with two lines is used instead of the moveable option slider.

If the space is not sufficient for the options available, the ^ icon is displayed below the option slider.

- Touch ^ to show further options.
- Touch v to hide them again.

Entering numbers and text, incorrect entries

The appropriate keypads are displayed to enter numbers and text. An optional field (numerical keypad) for entering phone numbers or a system PIN. A (typewriter) keypad for entering text.

You use them to enter characters by touching the relevant character on the display. These then appear in the text or number field displayed on the page.

If several number and/or text fields are displayed (e.g., **First Name** and **Surname** in a directory entry), you must activate the field by touching it before writing. The flashing cursor is displayed in the activated field.

To avoid unnecessary incorrect entries: Touch a character on the keypad and this character is enlarged. If the wrong character is enlarged, you can move your finger to the required character (without lifting it from the display). The character is only copied to the text field once you lift your finger from the display.

Correcting incorrect entries

Briefly touch ⌫ to delete the last character.
Press and hold ⌫ to delete the whole content of the number or text field.

Entering text

- Touch the shift key ⇧ to change between lower and upper case.

  If upper case is activated, the keypad is shown in upper case letters, otherwise it is in lower case. Upper case is only activated for the next character. Then lower case is automatically reactivated.

  When editing a directory entry, the first letter and each letter following a space is automatically in upper case.
- Touch **123** if you want to enter a digit or a special character. Touch **More...** to view other special characters. Touch **abc** to return to the normal keypad (lower case).
- Touch 🌐 (if necessary several times) to change the character set or the keypad layout. The following keypad layouts are available:
  - Latin (default) character set with the keypad layouts QWERTZ, for Central Europe, QWERTY (American default) and AZERTY, for the French-speaking area
  - Greek character set
  - Cyrillic character set

Returning to idle status

▶ **Briefly** press end call key .

Or:

▶ If you do not press any key and do not touch the display, the display **automatically** reverts to idle status after approximately three minutes.

Returning to the previous display page

Just like the idle display pages, the icon appears on the left-hand side of the header on almost every page.

▶ Touch the icon to return to the previous display page (move backwards step by step).

Activating/deactivating key and display lock

The key and display lock prevents the phone being operated unintentionally.

When the handset is in idle status:

▶ Press and **hold** the menu key to activate or deactivate the lock.

When you activate the key and display lock, the **Keys and display locked** message is displayed briefly. The display backlight switches itself off.

If you touch the display when the key lock is activated, nothing happens; if you try to press a key, a corresponding message is displayed.

The lock deactivates automatically when you receive a call. It is reactivated when the call is finished.

Please note

- When the keypad lock is active, you cannot call emergency numbers.
- The display is automatically locked with the aid of a proximity sensor if you hold the handset to your ear (display backlight disappears). This lock is deactivated again when you remove the handset from your ear.
  The sensor is located on the right next to the earpiece. If you cover it accidentally with your finger during a call, the display will also be locked.

Menu tree

- Briefly press the O key when the handset is in idle status to open the main menu. The main menu consists of the **Applications** and **Settings** pages.
- Drag your finger horizontally across the display to switch between the pages.

Applications menu

Main menu
Applications

Contacts
Call List
Write Text Message
Room Monitor
Calendar
Alarm
Screensavers
Caller Pictures
Sounds

Settings menu

Main menu Settings	Submenu Current setting	Additional setting options
Date + Time	Time	
	Date	
Audio Settings	Ringtones	Volume
		Crescendo
		Int. Calls
		Ext. Calls
		Time Ctrl (Ringer Off)
		Anon. Call Silenc.
	Int	
	Ext	
	Silent Alert	
	Reminder Signal	Volume
		Crescendo
		Sound
	Advisory Tones	
	Confirmations	
	Battery Warning	
	Music on Hold	

Main menu Settings	Submenu Current setting	Additional setting options
Display + Keypad	Screensaver	
	Activation	
	Selection	Slideshow
		Calendar
		Digital Clock
		Analogue Clock
	Backlight	
	In Charger	
	Out of Charger	
	Backlight Timeout	
	Number Info in Dial Lists	Number Type Only
		Type and Number
	Indication of New Messages	
	LED + Display Info	
	Keypad	
	Key Tones	
	Key Vibration	
	Keypad with R/P	
	Keypad w. Letters	
Language + Location	Display Language	
	Country	
	Area (Dial Code)	
Handsets + Base	This Handset	
	Registered Handsets	
	Connected to Base	Base 1
		:
		Base 4
		Best Base

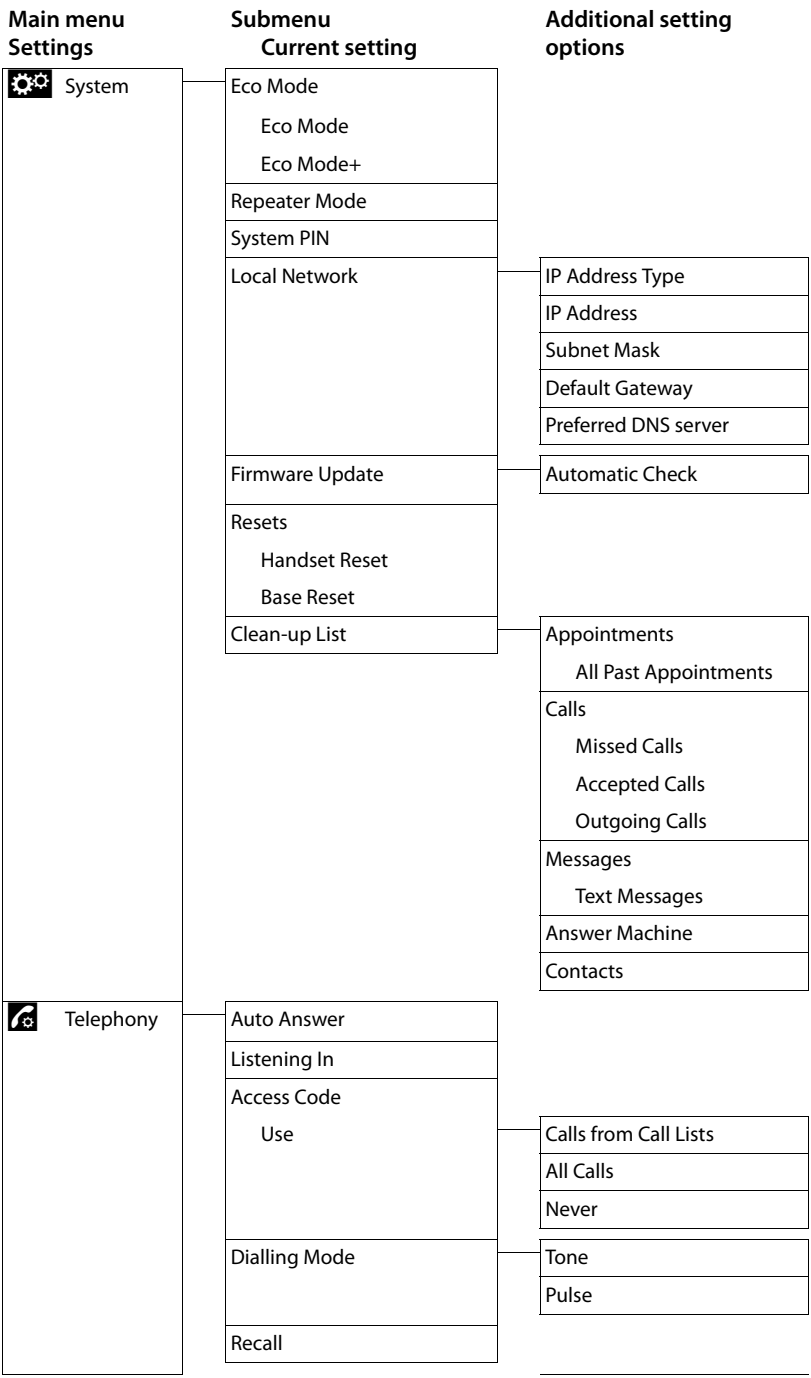
Main menu
Settings
Submenu
Current setting
Additional setting options
System
Eco Mode
Eco Mode
Eco Mode+
Repeater Mode
System PIN
Local Network
IP Address Type
IP Address
Subnet Mask
Default Gateway
Preferred DNS server
Firmware Update
Automatic Check
Resets
Handset Reset
Base Reset
Clean-up List
Appointments
All Past Appointments
Calls
Missed Calls
Accepted Calls
Outgoing Calls
Messages
Text Messages
Answer Machine
Contacts
Telephony
Auto Answer
Listening In
Access Code
Use
Calls from Call Lists
All Calls
Never
Dialling Mode
Tone
Pulse
Recall

Main menu Settings	Submenu Current setting	Additional setting options
SMS Service Centres	SMS Service Centres	Active Send Centre
		Service Centr. 1 : Service Centr. 4
Bluetooth	Own Device	
	Known Devices	
	Activation	
	Devices found	Device Name
Answer Machine	Activation	
	Mode	
	Announcement	Current Announcement
		Standard
		User recorded
	Advisory Message	Current Message
		Standard
		User recorded
	Recording Length	
	Recording Quality	Excellent
		Long Play
	Ring Delay	No Delay
		10 sec. / 18 sec. / 30 sec.
		Automatic
	Call Screening	
	Play Time Stamp	
Network Mailbox	Access Number	

Making calls

Making an external call

▶ Open the dial page, enter the number, **briefly** press .

Or:

▶ Open the dial page, press and **hold** , enter the number.

You can cancel dialling by pressing .

Accepting a call

You have the following options:

▶ Press .

▶ Take the handset out of the charger, if **Auto Answer** is activated.

▶ Gigaset SL910A: Touch [**Divert] to divert the call to the answering machine**.

Handsfree mode

You can configure various profiles for handsfree operation.

▶ If you are going to let someone listen in, you should tell the other party that this is happening.

Activating while dialling

▶ Enter the number, press twice.

Switching between earpiece and handsfree mode

During a call, when establishing the connection and when listening to the answering machine (Gigaset SL910A only):

▶ Press or touch [**Speaker**].

Place the handset in the charger during a call:

▶ Press and hold while placing the handset in the charger and for a further 2 seconds.

Switching to mute

Deactivate the handset's microphone during an external call. The other parties cannot hear you, but you can still hear the other party.

Switch to mute, cancel muting (activate/deactivate microphone):

▶ Touch [**Mute**].

Security check

The handset detects unsecured connections to the base, where third parties could listen in.

When establishing an external call or during an external call:

▶ Press and hold any position on the status bar.

If **Secure connection to base** is displayed, the connection is secure.

If **No secure connection to base** is displayed, you should end the call.

Customer Service & Assistance

Do you have any questions? As a Gigaset customer, you can find help quickly in this User Manual and in the service section of our Gigaset online portal www.gigaset.com/service.

In our constantly updated online service you can find:

- Extensive information about our products
- FAQ compilations
- Keyword search to help find topics quickly
- Compatibility database: Find out which base stations and handsets can be combined.
- Product comparison: Compare the features of several products with each other.
- Downloads for user manuals and current software updates
- E-mail contact form for customer service

Please register your phone online right after purchase.

This enables us to provide you with even better service regarding questions or an after sales query/issue/claim. In order to contact our customer service via email, please use the email contact form from our Gigaset online portal after selecting your home country.

Our representatives are also available on the telephone hotlines for consultation.

Customer Service & Assistance

Australia. 1300 780 878
Austria 0043 1 311 3046
Bahrain. 97 31 73 11 173
Belgium 0 78 15 66 79
Bosnia Herzegovina. 033 276 649
Brazil 4003 3020
(grandes cidades e regiões metropolitanas - Custo de uma ligao local)
. . . . . .0800 888 3020
(demais localidades - Gratuito)
Bulgaria **. . . . . +359 2 9710666**
(0.50 евро на минута от всички държави за стационарни телефони. За обаждания от мобилни телефони може да има други цени).
Canada. 1-866 247-8758
China . . . . . 0 21 400 670 6007 (RMB 0.11)
Croatia . . . . . 01 2456 555 (0,23 Kn)
Czech Republic 0 233 032 727
Denmark . . . . . +45 (0) 35 25 86 00
Finland. 09 231 134 25
France **. . . . . +33 170 706 181**
Coût d'un appel local depuis une ligne fixe France Télécom.
Germany 01805 333 222
Der Anruf kostet Sie aus den deutschen Festnetzen 0,14 € pro Minute. Anrufe aus den deutschen Mobilfunknetzen kosten höchstens 0,42 € pro Minute.
Greece**. 801-100.0.500**
(Χρέωση 0,0026 € το λεπτό για το σταθερό δίκτυο της Ελλάδας. Για κλήσεις από κινητό ίσως ισχύουν άλλες χρεώσεις)
Hong Kong 2763 0203
. . . . . .2389 7285
Hungary. . . . . .01 267 21 09 (27 Ft)
India . . . . . Please refer to your
. . . . . local warranty card
Indonesia . . . . . (62-21) 5673813
. . . . . .(62-21) 888856000
Ireland 18 50 77 72 77
Italy **. 199.15.11.15**
(€ cent 8,36 + IVA al minuto da telefono fisso della rete Telecom Italia senza scatto alla risposta mentre per le chiamate effettuate attraverso la rete di altri operatori fissi o mobili consultate le tariffe del vostro operatore)
Jordan. 00962 6 5625460/1/2
Kuwait. . . . . +965 -22458737/22458738
Lebanon. . . . . +9611240259/
. . . . . +9611236110
Luxembourg. . . . . +352 8002 3811
Malaysia . . . . . .+603-8076 9696
Malta . . . . . .+390 2360 46789 (0,10 €)
Mexico
. . . 01800 999 4442738 (01800 999 GIGASET)
Netherlands**. 0900-3333102**
(0,25 € per minuut (vast net). Voor oproepen uit het mobiele netwerk kunnen andere prijzen gelden.)
New Zealand 0800 780 878
Norway. 22 70 84 00
(Oppstartskost 89 øre + 15 øre pr minutt fra fasttelefon. For samtaler fra mobil vil det gjelde egne priser.)
Oman . . . . . +968 709281 Ext. 49/21/75
Poland. 801 140 160
Portugal **. . . . . (351) 808 781 223**
(custo de uma chamada local)
Qatar . . . . . .00974 4257777 / 00974 4257844
Romania. . . . . +40 021 204 9130
Russia 8 (495) 2281312
Saudi Arabia . . . . . 00966 2 6500282 Ext. 209
Serbia 0800 222 111
Singapore 6735 9100
Slovak Republic. . . . . .02 59 68 22 66 (4,428 sk)
Slovenija 01 5644171
South Africa . . . . . +2711 46 13 181
Spain. 902 103935
Sweden 87 50 99 11
Switzerland. 0848 212 000
Taiwan 02 266 24343
Turkey. 0216 459 98 59
Ukraine. . . . . .+380-44-451-71-72
United Arab Emirates . . . . . +97144458255/
. . . . . .+97144458254
United Kingdom 0 84 53 67 08 12
USA 1-866 247-8758
Vietnam 1900 545 416

Please have your record of purchase ready when calling. After sales service is not offered in countries where our product is not sold by authorised dealers.

Manufacturer warranty (Middle East)

On the purchase of your new Gigaset product, we guarantee that this equipment is a genuie manufacturer's product and extend the following warranty:

We guarantee this product against manufacturing defects for two full years from the date of purchase, unless specified otherwise.

Adaptors and batteries for cordless phones carry 6 months warranty from the date of purchase.

Gigaset Communications authorized Service Centres will replace or repair, if necessary, any defective part/parts free of charge by presenting this certificate of warranty at the Service Centre mentioned overleaf.

This Certificate of warranty does not apply if the telephone has:

1. Been misused, mishandled, willfull damaged, neglected, damaged by lightning, improperly repaired, tested, altered improperly in any way.
2. A defect arising out of any failure to follow instructions either in the manual or product specification.
3. In case repairs are carried out of by unauthorized personnel or unauthorized source warranty will be void.
4. A defect arising from using non-Gigaset approved accessories or ancillary items attached to or in connection with the telephone.
5. If this certificate of warranty is not signed and stamped by the authorised distributor.
6. Any other claim resulting out of or in connection with the device shall be excluded from this warranty.

For Southern Africa:

In the event of an after-sales issue/warranty claim please refer back to your point of purchase.

Proof of purchase (receipt) has to be submitted.

Certificate of warranty (Middle East)

The warranty is not valid if it is not signed and stamped by the authorized distributor.

Please fill in the following details and stamp the card to validate the warranty.
All details must be filled in by the dealer and retained by the customer.
This warranty shall apply to products purchased in the Middle East only.

Customer's Name: _____

Product / Model: _____

Dealer's Name: _____

Date of Purchase: _____ Invoice / Cash Memo Details: _____

_____

Dealer's Stamp

Service Centres (Midde East)

UAE

Customer Service Hotline UAE

TEL: 00971-4-4458255 / 00971-4-4458254

Service Collection Point

www.technocare-prodigy.com

KARAMA

Sea Shell Electronics
Opp. Karama Centre
Dubai, UAE
Tel: 00971-4-3979228
Fax: 00971-4-3966205

Deira

Souvenier Mobiles,
Omar Bin Katab Road,
Oppst. Gulf Peral hotel (Tahir Hotel)
Al Baraha Street,
Tel: 00971-4-2731910 / 00971-4-2737377

Sharajah

Hotline Telecom
Sahara Centre
Sharjah, UAE
Tel: 00971-6-5312126

Al Ain

Phone Station
Al Ain Mall, Town Centre,
Tel: 00971-3-7515588

Fujairah

Al Manzil,
Al Gurfa Street,
Main market Road,
Tel: 00971-9-2233488

Oman

National Telephone Services Co. LLC
P.O. Box 2786 PC:112, Sultanate of Oman
Tel: +968-709281 Ext. 45/21/75
Fax: +968-791013
E-mail: isonts@omentel.net.om

Qatar

Modern Home,
51-East - Salwa Road,
Al-Maha Complex, Doha
Tel: 00974-4257844 / 00974-4257777
Fax: 00974-4314700

Bahrain

Authorized Service Center,
Bldg: 211, Rd: 339, Block: 321,
Old Place Road, Manama,
Tel: 00973-17311173
E-mail: servicemanager@ashrafs.com.bh

Saudi Arabian Service Centers:

Ahmed Abdulwahed Trading Co.

Jeddah Service Center
Al-Amal Plaza, Hail Street,
Jeddeh, Saudi Arabia,
Tel: 02-6500282 Ext. 209

Riyadh Service Center
Olaya Street
Riyadh, Saudi Arabia,
Tel: 01-4622470 / 4623850

Khobar Service Centre
Al-Khobar Street,
Al-Khobar, Saudi Arabia,
Tel: 03-8944193/03-8952359

Madina Munawara
Al-Ayon Street,
Tel: 00966-4-8387931

Khamis Mushyat
Al-Khalidiya St.,
Tel: 00966-7-2230772

Tabuk
Main Street,
Tel: 00966-4-4219232

Kuwait

Customer Service Hotline Kuwait

Tel: 00965-22458737 / 00965-22458738

Al-Baptain Service Center

Shop #: 247

Qibla, Block 11,

Avenue 11,

Souk al Kabeer,

Fahad Al Salem Street,

Tel: 00965-2464993

Jordan

SEDR Home & office Electronics

Co - Tronicom

Wasfi Al-Tal St.,

Building No. 80,

2nd floor,

Tel: 00962-6-5625460/1/2

Lebanon

306, Jdeideh Sin el Fil Blvd,

Tel: 00961-1240259 / 00961-1236110

Authorisation

This device is intended for connection to analogue networks outside the European Economic Area (with the exception of Switzerland) depending on national type approval.

Country-specific requirements have been taken into consideration.

We, Gigaset Communications GmbH, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/CE.

A copy of the 1999/5/EC Declaration of Conformity is available at this Internet address:
www.gigaset.com/docs

CE 0682

Please note

Signs of wear on the display and metal frame are excluded from the warranty.

Index

A

Activating
display lock 26
key lock 26
Applications menu 21
Area code
setting 13
Authorisation 39

B

Back function 26
Base
connecting 9
setting up 8
Battery
charging 12
charging status 4
inserting 11
Battery charging status 4
Button 18

C

Call
accepting 32
external 32
Calling
externally 32
Changing
character set 25
display page 19
keypad layout 25
page menu 21
Configurable page 17
idle display 19
Correcting
incorrect entries 25
Country
setting 13
Customer Care 33
Customer Service & Assistance 33

D

Deactivating
display lock 26
key lock 26
Dial page
idle display 3, 19
Directory
opening 17
Display
in idle status 19
Display language
setting 13
Display lock 26

E

Earpiece mode 32
End call key 32
End call/end key 3
End key 3
Entering
text 25

F

Function
activating/deactivating 18
selecting 18

H

Handset
activating/deactivating 18
idle display 17, 19
idle status 26
in idle status 17, 19
muting 32
overview 3
setting up 11
Handsfree mode 32
Hearing aids 7

I

Icons
option slider 5
status bar 4
Idle display
configurable page 17
dial page 3
handset 17, 19
Idle status
handset 17, 19
returning to 26
Incorrect entries
correcting 25

K

Key and display lock
on/off 3
Key lock 26
Keypad 3
Keys
end call key 32
handset 3
paging key (base) 4

L

List
scrolling in 23
Lock
activating/deactivating display lock . . 26
activating/deactivating key lock 26
Lower/upper case 25

M

Making calls
accepting a call 32
external 32
Manufacturer warranty (Middle East) . . . 35
Medical equipment 7
Menu
applications 21
opening 21
settings 21
using 21
Menu guidance 21
Menu key 3
Message page
idle display 19
Mini USB connection socket 3
Muting
handset 32

N

Navigation area 3, 19
Numbers
entering 25

O

Opening the submenu 22
Option slider 3, 24
icons 5
moving 24
showing/hiding 24

P

Package contents 8
Page
changing 19
Paging 4
Paging key 4
Phone
operating 18
Power adapter 7

Q

Quick access 17

R

Range 8
Registration 1

S

Scrolling in lists 23
Selecting a list entry 18
Service Centres (Midde East) 37
Service functions
configuring 22
Setting
date 13
time 13
Setting up
base 8
handset 11
Settings menu 21
Signal strength 4
Status bar 3, 20
icons 4
Status page 20
closing 20

T

Talk key 3
Text
entering 25
Touchscreen 3
operating 18

U

Upper/lower case 25
USB connection socket 3

V

Vertical scrolling 23

Issued by
Gigaset Communications GmbH
Frankenstr. 2a, D-46395 Bocholt

© Gigaset Communications GmbH 2011
All rights reserved. Subject to availability.
Rights of modification reserved.
www.gigaset.com